

# Alkaline Test Kit

**TK5015-Z**  
**yellow caps**

## KIT COMPONENTS:

PH1605-A Phenolphthalein Indicator, 30 mL  
SA9555-B Sulfuric Acid 0.12N, 60 mL  
VL-0525-V Vial, 5-25 mL

### SAFETY TIPS:



Wear  
Gloves



Use Eye  
Protection



Read  
SDS

### TESTING TIPS:



Collect  
Accurate  
Sample



Hold  
Bottles  
Vertically




Ensure  
Proper  
Lighting

**INTERFERENCES:** Turbid samples may mask the color change at the endpoint.

**ATTENTION:** As necessary, calibrate this kit against a known standard made with plant / make-up water. Be sure to collect a representative sample.

**1** Rinse vial three times with sample to be tested. **Fill vial to 10 mL.**

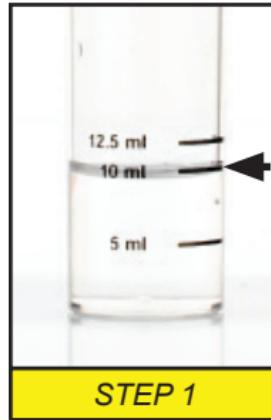

**2** Add 3 drops of **Phenolphthalein Indicator** (PH1605) and swirl to mix. The sample should turn pink.



**3** **Add Sulfuric Acid 0.12N** (SA9555) one drop at a time while swirling. Count the number of drops until the sample color changes from pink to clear.

# drops x 20 = ppm Alkalinity as NaOH

