

Thymol Blue pH Test Kit

pH 8.0 – 9.4 (0.2 increments)

TK9902-Z
white caps

KIT COMPONENTS:

TB9604-B	Thymol Blue Indicator, 60 mL
0106	Test Tube, square, w/cap
2187-01	Thymol Blue Octa-Slide 2 Bar
1101	Octa-Slide Viewer

SAFETY TIPS:



Wear
Gloves



Use Eye
Protection



Read
SDS

TESTING TIPS:



Collect
Accurate
Sample



Hold
Bottles
Vertically



Ensure
Proper
Lighting

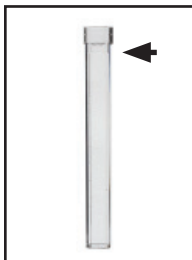
INTERFERENCES: Turbid or highly colored samples may mask the color change at the endpoint.

ATTENTION: As necessary, calibrate this kit against a known standard made with plant / make-up water. Be sure to collect a representative sample.

Video Procedure



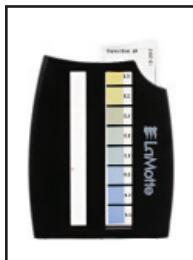
1 Rinse test tube three times with sample to be tested. **Fill test tube to the 10 mL line.**

**STEP 1**

2 Add 10 drops of **Thymol Blue Indicator** (TB9604). Cap and mix.

**STEP 2**

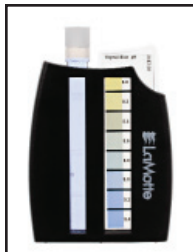
3 Insert **Thymol Blue Octa-Slide 2 bar** (2187-01) into the Octa-Slide 2 Viewer (1101).

**STEP 3**

4 Insert **test tube** into Octa-Slide Viewer.

Match the color of the test tube to the color standard. Record as pH units.

The Octa-Slide Viewer should be held so non-direct light enters through the back of the Viewer.

**STEP 4**